


SHEET 2 Starting from eaves

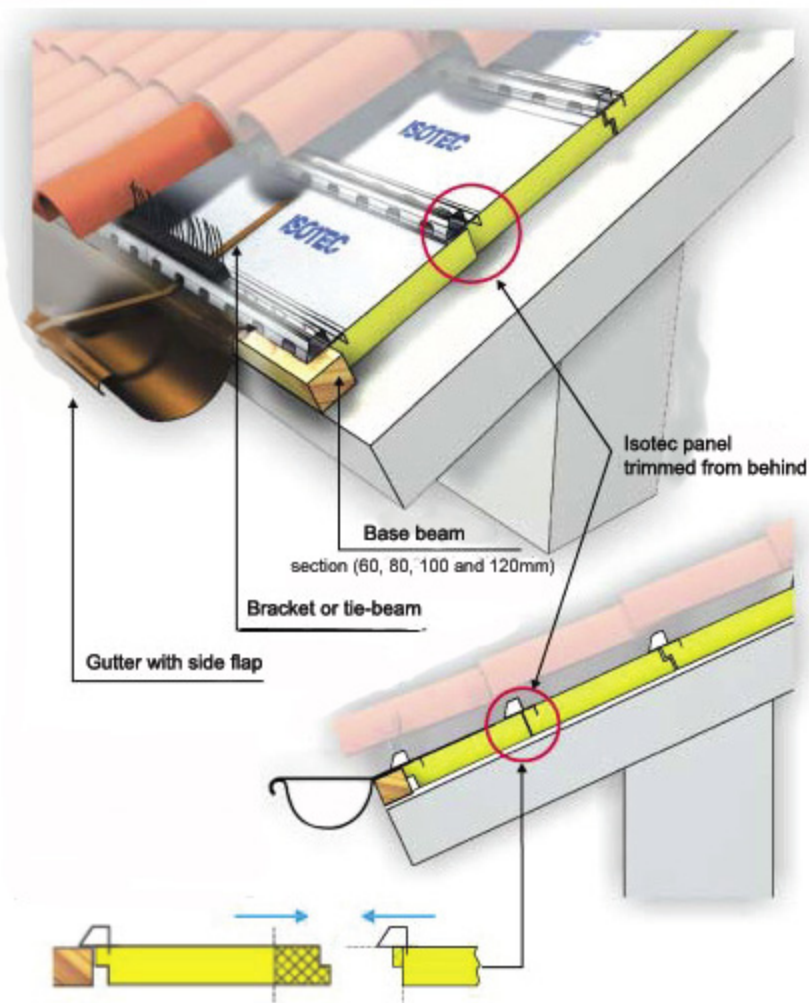

Lay wood beam at edge of eaves (i.e. use a 6x6 for Isotec 6 cm panel and 8-10-12 cm for other thickness). Attach gutter so it overlaps the wood beam. The gutter can also be secured later. Size the eaves panel for width, then lay the first row of Isotec panels at the eaves. Lay the second row of Isotec panels after removing the tooth under the contour so that it adheres to the Isotec panel at the eaves. Continue with more layers as far the ridge.

