


SHEET 6 Ridge

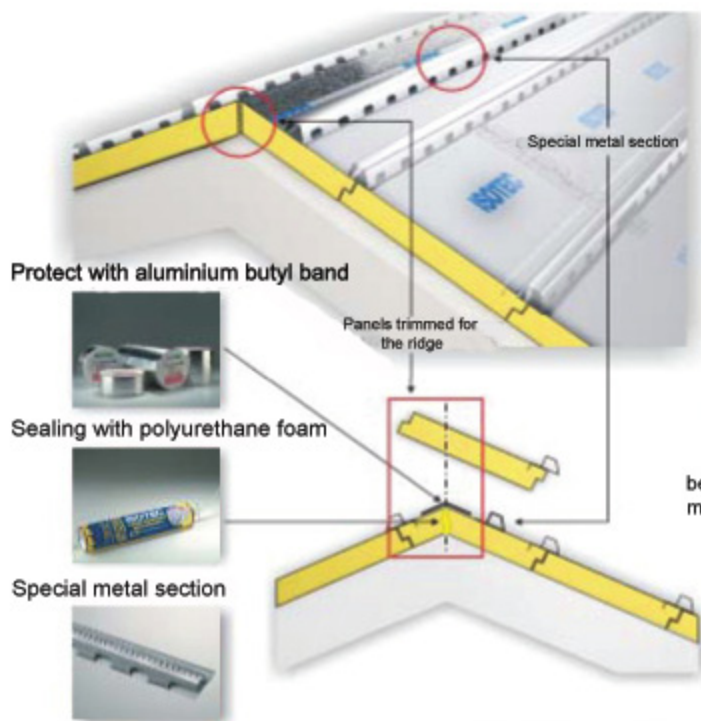

Arrival at the ridge

Near the ridge the pitch must be completed using the portion of a panel equipped with a section or with an entire panel which has been cut to the right size. If there is no section at the ridge a separate metal section can be used.

Ventilated ridge

To allow air flow the elements along the ridge should never be attached with mortar because the air beneath would be blocked. Ridge elements must be mechanically fixed using appropriate brackets to the length of wood.

